

## How to use the buttons on a tablet

Here's a quick guide on some of the main tablets, what buttons they have and what the buttons do. This might not be applicable to every tablet, so we'd recommend looking at the guidance your tablet came with. The example shown here is an iPad:

### Lock Button

- Found on the top of the tablet
- Locks the tablet: press the button again to unlock the next time it's used
- Power on/off by holding down



### Volume Up and Down

- Found along the side of the tablet
- Turns the sound on the device either up or down

### Home Button

- Found on the front of the tablet, at the bottom
- Takes you back to the "home page", where all the apps are.
- Multiple presses and long presses can do other things, take a look at the settings to customise these.

